

# CLEANFIX Scrubby 145 3.0 Ah



## Instruction Manual

### In general

Congratulations with your excellent choice. The Cleanfix Scrubby 145 3.0 Ah is a light and easy to handle battery machine for different kind of daily returning cleaning activities. The machine is extremely useful at the cleaning of staircases, walls or stacked rooms. Places usually difficult or impossible to be reached by conventional standard machines.

### Parts and accessories

- The disk connected to the motor and the on/off switch on the handle of the plastic moulding are standard.
- Reversible telescope handle, including the adjustable grip.
- Battery, NiMH 9,6V 3000 mAh
- Quick battery charger 230 V (eventual 120 V)
- Nylon brush (several models, different degrees of coarseness, suitable for several purposes, available)
- Nylon pads (different degrees of coarseness available)
- Micro fibre pad
- Solution dispenser.

### Before use

- Check if the voltage of the local electricity network (230 or 120 V) is the same as mentioned on the label of the battery charger. Charging of the battery is only permitted in dry areas.
- Put the plug of the charger in the wall socket and yellow led will light up.
- Use only battery chargers, which are recommended by producer.
- Place battery into the charger. Red light indicates that the battery is being charged.
- When battery is charged and is ready to be used, the green light will light up.
- If the battery is defective or abnormal, red and green lights will be flashing alternatively.
- Bring the battery into the special opening of the motor part.
- Press battery firmly down till bottom. The catches on the battery take care of bringing the battery into the right position inside the machine.
- Place the brush with nipples up in the holes of the drive disk on the bottom of the motor. Just in case the nylon brush became out of shape, during transport or storing, it easily can be straightened by keeping the brush in hot water during 30 seconds. The brush will regain its original shape.
- Working with pads, they should be placed as central as possible on the driving disk and directly attached to the Velcro. The right working position, depending to the job, will be obtained by fixing the telescope handle on the correct length, using the plastic turn lock.
- Use the screw buttons, to fix the adjustable handle on the preferred position.

### Reversible telescope handle

- Place the telescope handle in the opening of the handle at the motor part and press firmly until the fixing button on the connector comes up. Tighten the fixing bold on the iron support slightly, hereinafter.
- Before removing the handle, first lose the fixing bold on the iron support slightly. Push the button on the connector of the handle and pull during holding the button.

### At use

#### With telescope handle, when right handed:

- Take the adjustable grip into the left hand.
- Take the top handle with on/off switch in the right hand.
- Pull the trigger switch and keep this fixed during use. After the switch is set free, motor stops instantly.

#### As hand held unit without the telescope handle.

- Take the motor part by the plastic grip on top in the right hand.
- The motor part of the **Cleanfix Scrubby** has standard a safety lock on top of the grip, which blocks the use of trigger switch.
- Push the safety lock with thumb forward, before using the trigger switch. When motor is running the safety lock can be released.
- The motor starts running as soon as the trigger switch has been pulled. The trigger switch continuously pulled keeps motor running. After the switch is set free, motor stops instantly.

### Notes after every use

- Take brush or pad, depending to the activity, from the machine and clean them thoroughly.
- Brush to be stored with bristle up to avoid damage to brush shape.

**When battery is low**

Remove the battery from your **Cleanfix Scrubby** by pressing on the lids on both sides of the battery and pulling the battery out of the motor part.

Plug the quick battery charger in the wall socket. The green light lightens up.

Place battery into charger. The red light indicates loading.

If you have trouble getting a red light for charging, insert battery to the charger and remove again within 15 seconds. This resets the safety zone on the battery

**Safety instructions for battery and machine**

- **Never use charger in wet or moisture environments!**
- Prevent damage to electricity cables, caused by sharp edges or objects. In case the power cable is damaged, charger should be taken to a repair shop, authorized by manufacturer. Changing cables require special tools and spare parts.
- Never destroy worn-out batteries by burning. They may explode!
- In case liquid from battery contacts skin, proceed as following:
  1. Wash the contacted skin with water and soap.
  2. Neutralize the battery liquid with vinegar or juice of lemon (acid)
  3. If battery liquid contacts the eyes, at once rinse eyes with clean water during at least 10 minutes. Turn to a doctor immediately.

**Attention!** Worn-out batteries can damage environment, should be taken to a centre for hazardous waste and not mixed to normal refuse collection and disposal.

Under extreme circumstances, little liquid might extend from battery. This does not necessarily indicate failure or damage.

**Other points of attention.**

- Though the **Cleanfix Scrubby** is protected against penetration of liquid, only driving disk and not motor nor battery are allowed to get into contact with water.
- The **Cleanfix Scrubby** has a splashguard. Depending to the job however, we advised to wear eye and face protection against direct contact with cleaning agents during operation.
- Working on stairs or platform, all relevant safety regulations and torque caused by machine, should be considered
- All rotating parts of the **Cleanfix Scrubby** are optimal protected. Never the less entanglement hazard caused by rotating parts of the motor should be prevented.

**Technical information:**

- Battery 9,6 V NiCd 3000 mAh
- Quick battery charger 230 V (also available as 120 V) charging time 60 minutes
- Drive disk / brush speed 350 rpm
- Brush body and bristle made of nylon
- Drive disk suits to 150 mm dimension pads.
- **Cleanfix Scrubby**, including battery, weights 2,8 kg only
- Battery, quick battery charger and **Cleanfix Scrubby** have CE approval.